
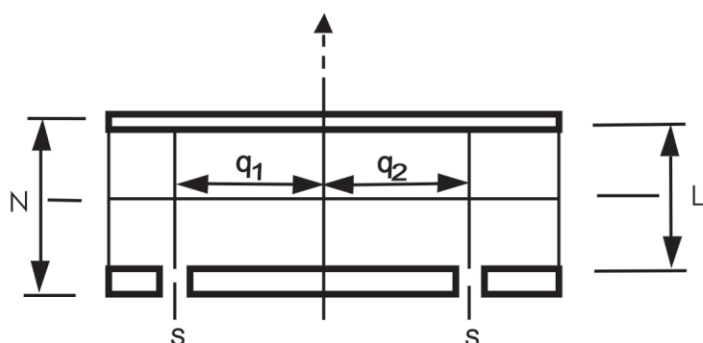
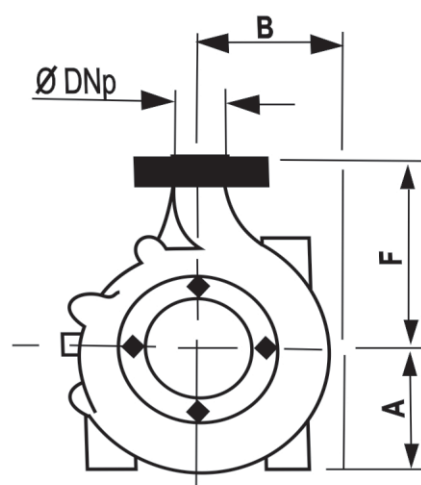


1 Estágio

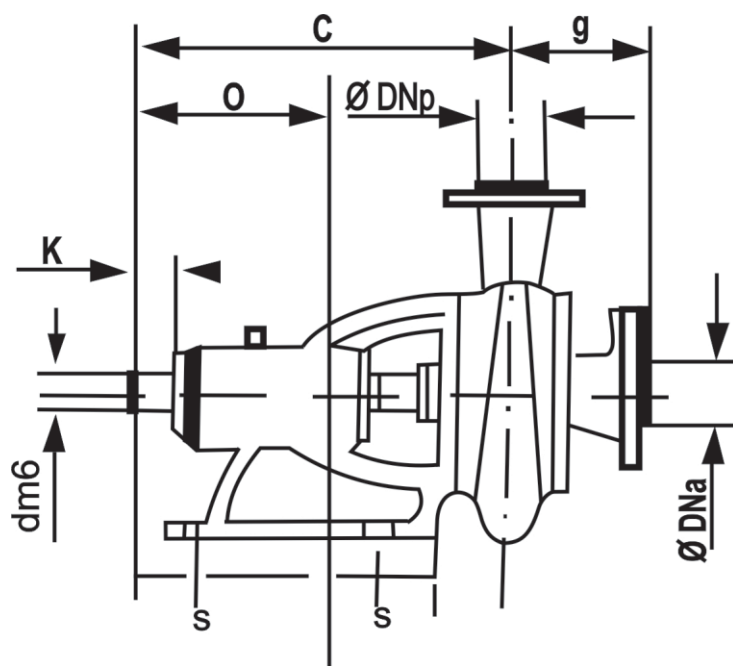

BOMBA	Sup.	A	B	C	F	g	L	N	O	q ₁	q ₂	S	dm6	K
FL-40+32+20.5	2	160	140	410	185	100	148	178	205	85	85	20	28	60
FL-50+40+12.5	1	118	110	305	120	90	90	118	160	69	69	15	24	50
FL-50+40+16.0	1	118	120	305	130	90	90	118	160	69	69	15	24	50
FL-50+40+17.5	1	118	130	310	150	100	90	118	160	69	69	15	24	50
FL-50+40+18.0	1	118	130	310	150	100	90	118	160	69	69	15	24	50
FL-50+40+20.5	2	160	140	410	200	95	148	178	205	85	85	20	28	60
FL-50+40+21.0	2	160	140	410	200	95	148	178	205	85	85	20	28	60
FL-65+50+26.0	2	155	175	410	250	100	148	178	205	85	85	20	28	60
FL-80+65+16.0	1	118	140	320	160	125	90	118	160	69	69	15	28	50
FL-100+80+16.0	2	155	165	420	225	130	148	178	205	85	85	20	28	60